
Manual ratchet lock

Special edition for **Kromer Type 7241**

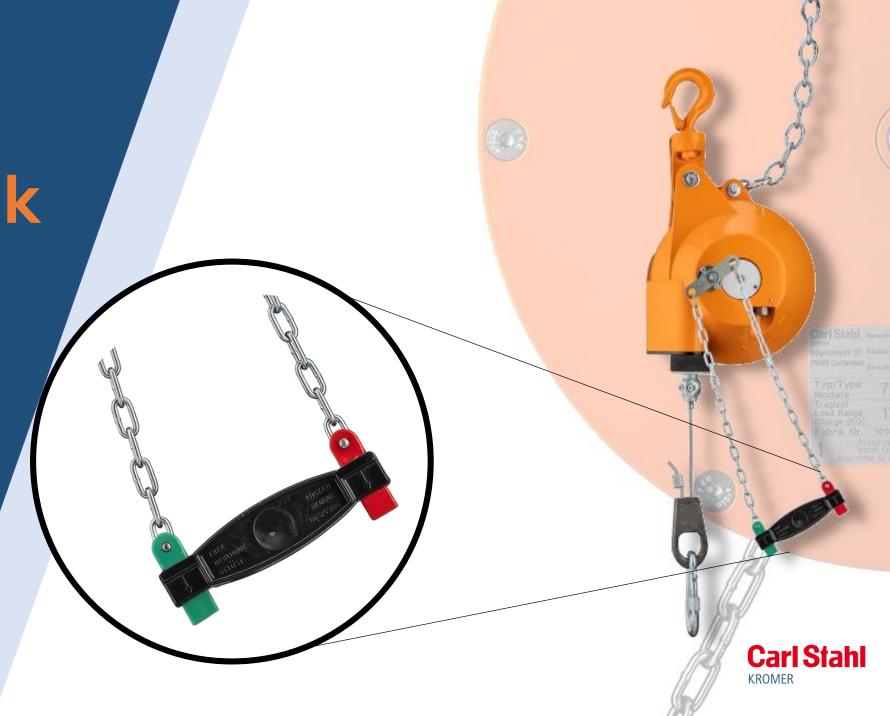

Content


- 1. How the system works
- 2. Activate the manual ratchet lock
- 3. Deactivate the manual ratchet lock
- 4. Contact and support







How the system works

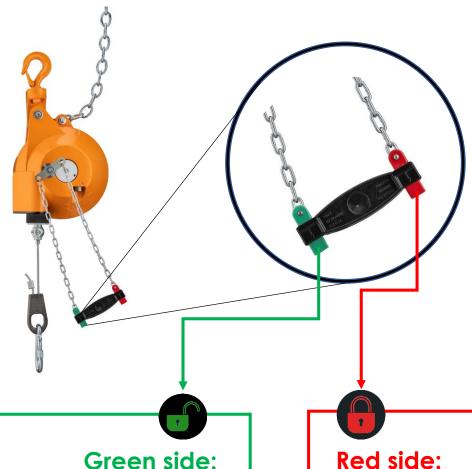

Unlock / deactivate Tools can be moved up and downwards.

Lock / activate Fixes cable at a defined position.

The ratchet lock system


The ratchet lock is an arresting mechanism that locks the retracting cable in defined positions. For some specific applications this mechanism helps to support ergonomics.

The manual ratchet lock system, increases the usability for Kromer Type 7241: No tools are necessary for the engagement.





How to activate the manual ratchet lock.

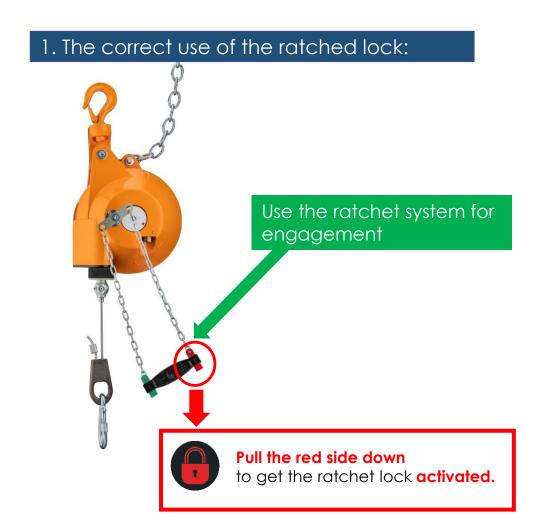

2. Cable drum is locked when the system is activated. Fix predefined cable position

Carl Stahl

KROMER



How to **deactivate** the manual ratchet lock.



STEP 1:


To unlock the system again pull down the cable a little bit first.

Keep holding the cable in this position and go on with STEP 2.


STEP 2:

While holding the cable (Step 1), the ratchet system is ready for use.

Now just pull on the green side to deactivate the ratchet lock system.

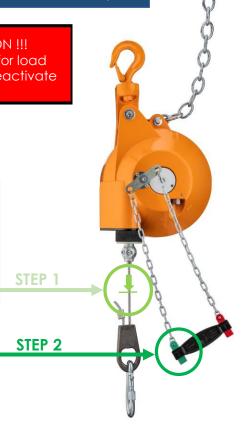

2. Drum is unlocked now:

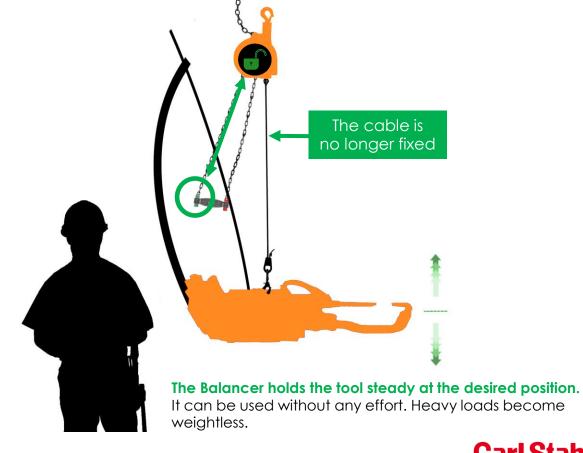



Contact us









www.kromer.com

