

Positioner type 5250




Everything kept securely in position

The Positioner is a perfect aid for improving workplace ergonomics. It allows you, at last, to position your supply units easily and conveniently at the desired height.

Effortless adjustability in height means ergonomic access to your energy sources. The braking force can be conveniently adjusted via the lateral adjusting screw.

The fields of use of the Positioner are practically unlimited: electric current, water, compressed air, lighting, etc. You simply push up the supply unit or pull it down for optimal height adjustment.

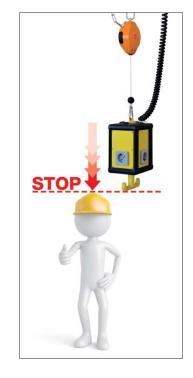





Positioner type 5250

The Positioner virtually eliminates the risk of injury by suspended supply units, since the suspended load can be effortlessly adjusted in height as required. The integrated brake ensures that the chosen position is securely maintained – even if the weight of the unit varies, e.g. as a result of connecting or removing compressed-air hoses. The housing is made of special plastic for superior impact resistance, which renders the Positioner suitable for use also under very rough operating conditions.

Need more information? Our team will be glad to give you advice.



- Housing made of impact-resistant plastic
- Safe load suspension by screw-type spring hook
- Braking force adjustable via lateral adjusting screw

Safety equipment:

- Safety chain as standard fall protection feature
- High-strength special suspension spring in riveted design
- Insulated suspension
- Very rigid and highly impact-resistant housing

Technical parameters:

Own weight: 0.8 kg

• Brake force: 0.5-6.0 kg (type 5250 0000 00) and

2.0-7.0 kg (type 5250 0000 01)

• Cable extension: 1.5 m

