
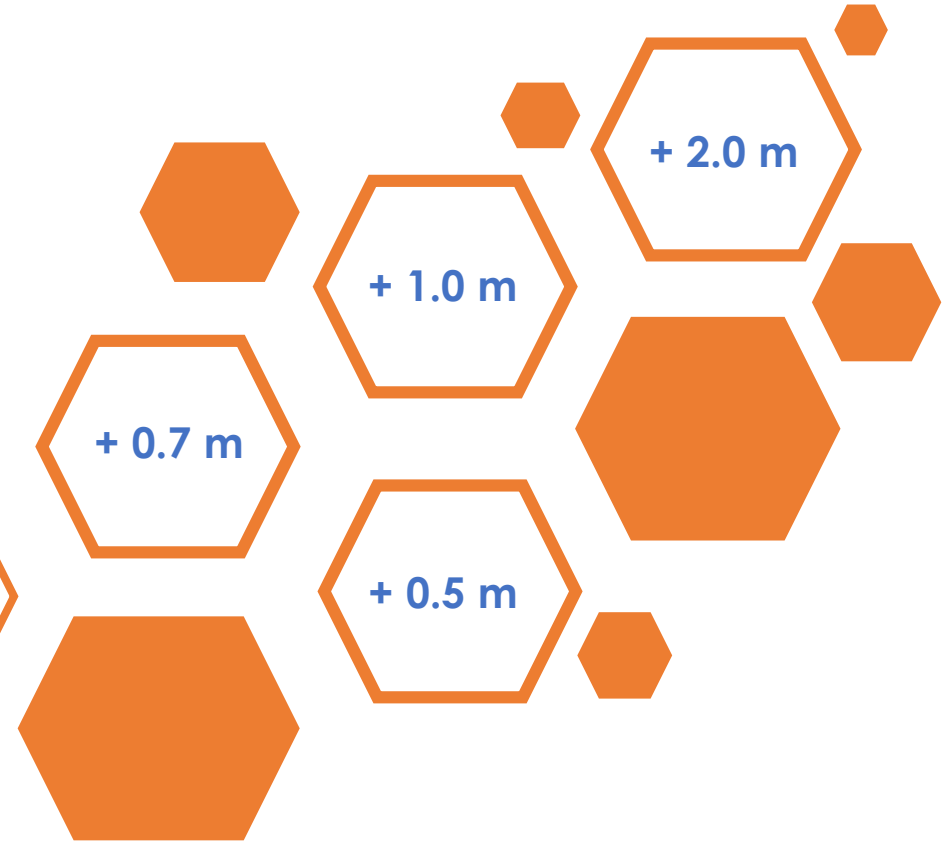


Accessories

Extra cable extension

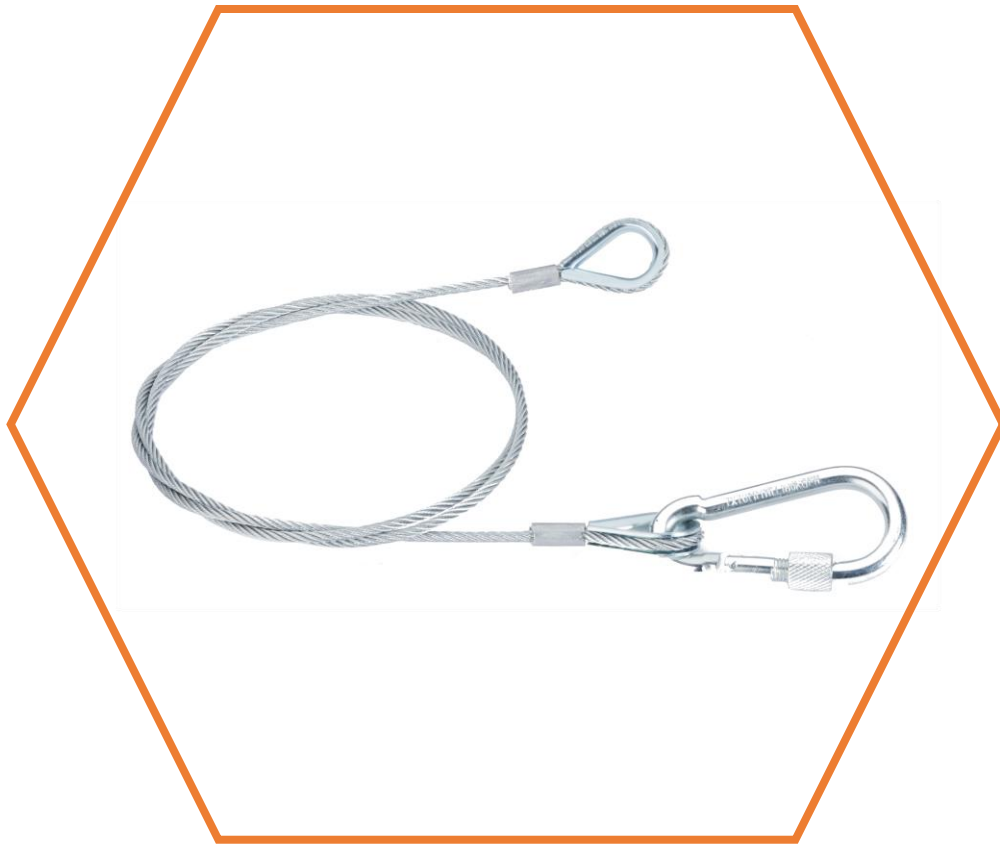

Content

1. General information
2. Benefit: Attachment points
3. Benefit: Enlarged work area
4. Availability of extra cable extensions
5. Contact and support

1. General information

The extra cable extension

Facts:

- High-strength steel
- Over 5-times safety factor
- Low rotation design
- Flexible design
- Made in Germany

Diameter:

3- and 5-mm

Length:


- + 0.5 meter
- + 0.7 meter
- + 1.0 meter
- + 2.0 meter

Further Cable customizations possible upon request.



Extra cable extension by Kromer

2. Benefit: Attachment points

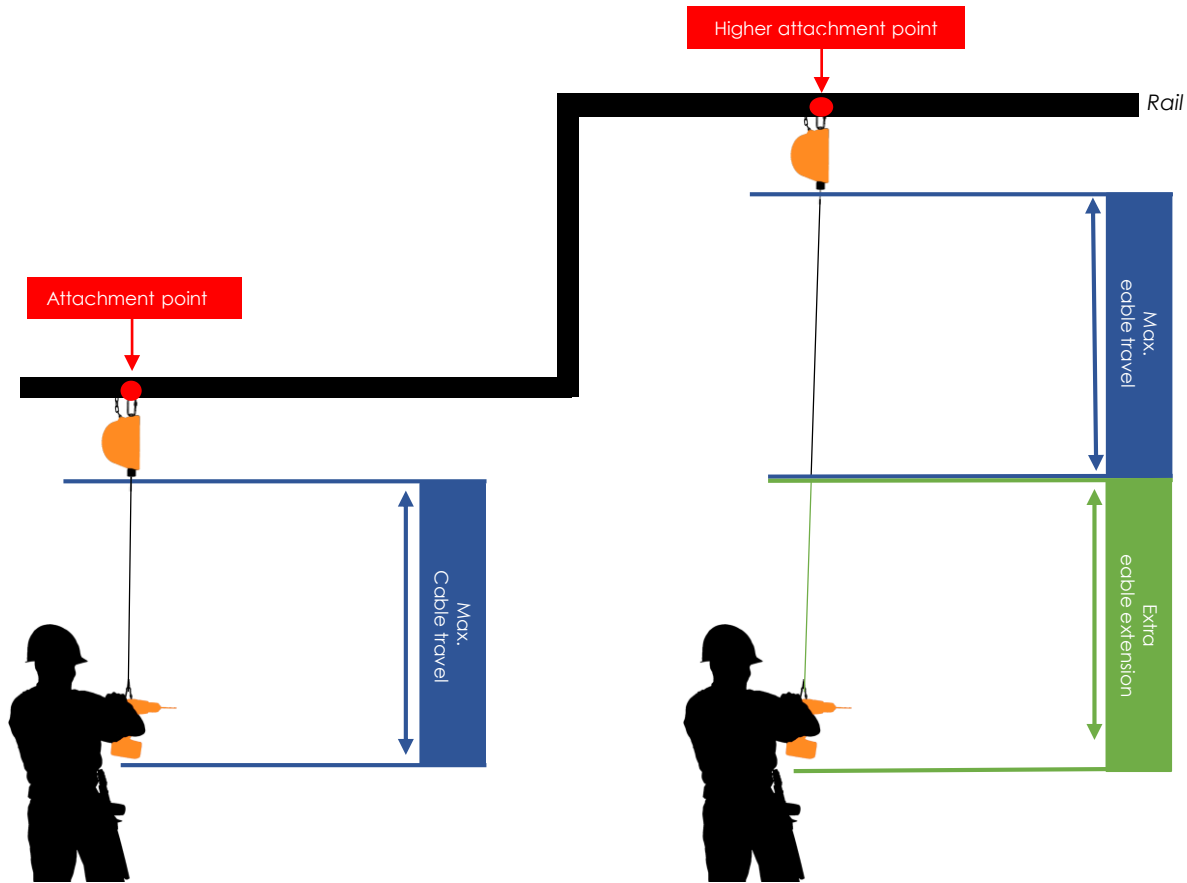

Note:

The extra cable extension doesn't change the cable travel. It will stay outside the housing.

Benefit

In some production facilities, attachment points for balancers or retractors are high up on the ceiling and therefore the max. cable travel cannot reach the required working area.



In that case, the extra cable extension helps to extend the max. cable length in order to reach the required working area.

3. Benefit: Enlarge useable work area

BASIC INFORMATION:

The general rule for a long lifespan of a balancer is, that the attached application (bottom) is in a vertical line to the attachment point (top) of the balancer. This significantly minimizes wear on housings and cables because the angle is **not more than +7% / -7% from the vertical line.**

Balancers are therefore only suitable for fixed, predetermined work areas.

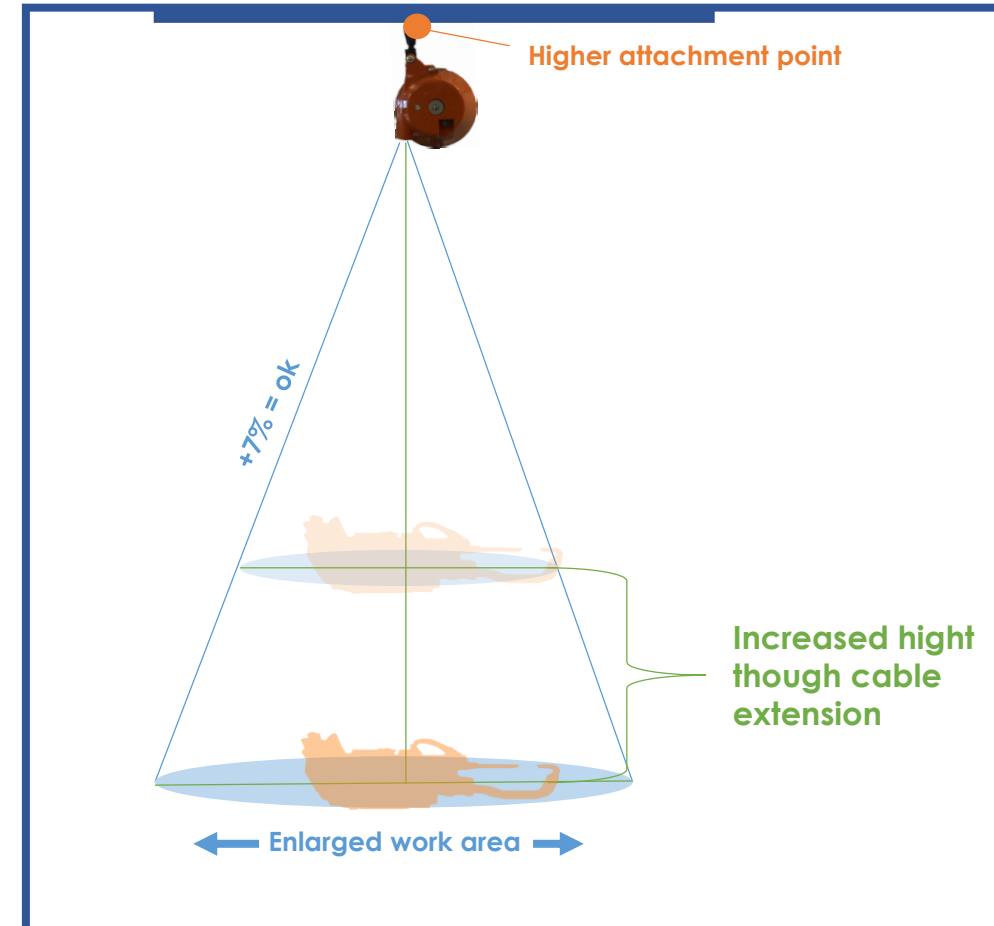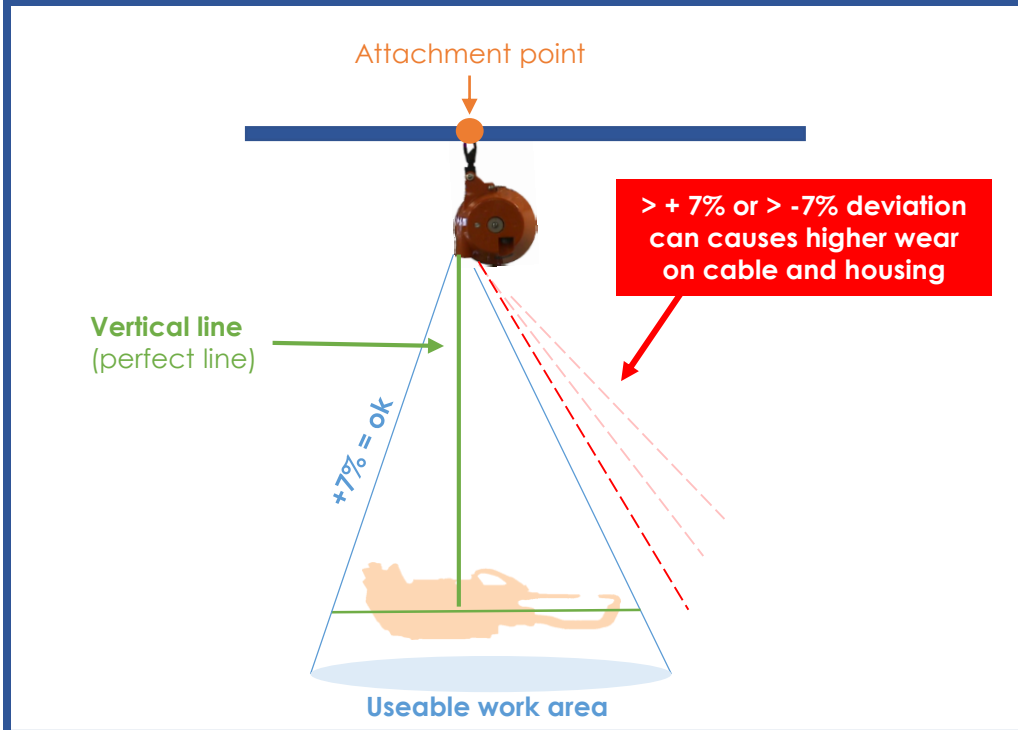

BENEFIT: ENLARGED WORK AREA

To increase the useable work area, you can choose a higher attachment point for the balancer. Note, that the deviation of a max. of +7% from the vertical line should still not be exceeded to avoid high wear.

4. Availability of the extra cable extension*

Article ID.	Length	Diameter	Suitable for Types
007.335 343	+ 0.7 m	3 mm	<ul style="list-style-type: none">72007211/127221/2272287230/317235/36
007.335 179	+ 1.0 m	3 mm	
007.335 180	+ 2.0 m	3 mm	
007.335 353	+ 0.5 m	5 mm	<ul style="list-style-type: none">72417245724872517261
007.335 344	+ 0.7 m	5 mm	
007.335 181	+ 1.0 m	5 mm	
007.335 182	+ 2.0 m	5 mm	



*Further cable customizations possible upon request.

This might be also interesting for you:

- **Kromer download area:** User manuals, catalogs, technical drawings and more: [click here](#).
- **Kromer service videos:** Cable replacement, Adjustment of suspension and more: [click here](#).

Further questions?

Contact us, we are happy to help:



+49(0) 7665 50207 - 0



kromer@kromer.com



www.kromer.com

KROMER E-SUPPORT



Contact us for a live-video conference.
We look forward to e-meet you.